

Operating manual of MaxProAir


1. Product

MaxProAir


2. Intended Use

This MaxProair is intended for inflating/deflating Dunnage Airbag.

3. Includes

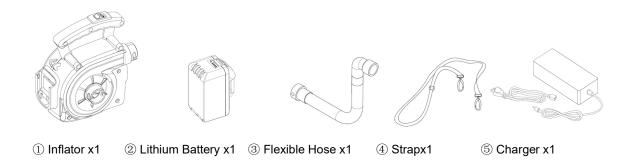

4. Parts List

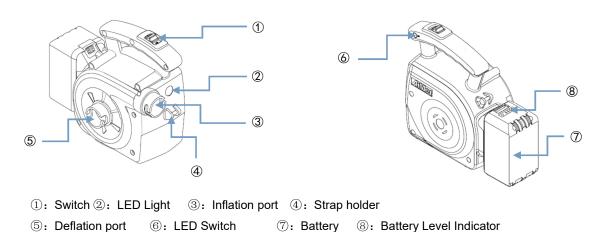


5. Technical Parameters

Weight (kg Include Battery)	Air Flow(m³/h)	Battery voltage/	Recharging time
		capacity	(h)
2.45	70	24V/5.2Ah	4




6. Operating Instructions


Installation and Inflation

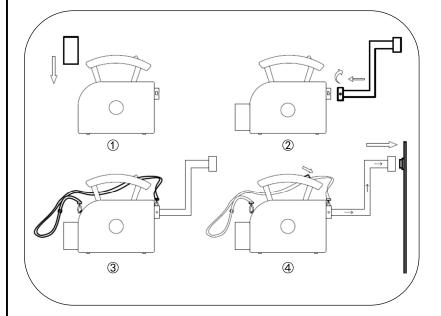


Reminder of completion of inflation

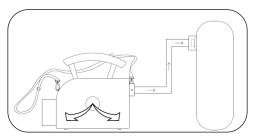


Disconnect the valve from the bag then turn off the inflator

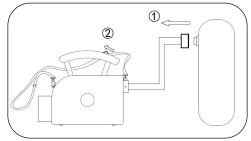


Deflation

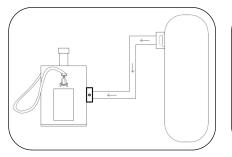


Lighting

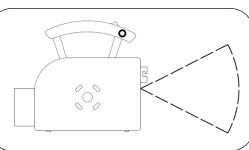

Inflator head can be held by the strap

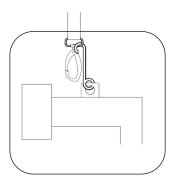


Power Display

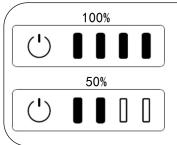



Charger

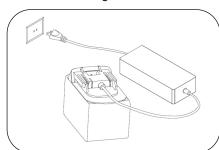



7. Important safety notes

- 1. Ensure that battery and inflator are properly connected before each use.
- 2. Before operating, check your battery level.
- 3. Disconnect the battery and turn off LED light when inflator is not in use.
- 4. Do not operate your inflator in rainy environment.
- 5. The air vents must never be blocked during inflating.
- 6. In order to avoid short-circuiting and burning the circuit board, please turn off the red switch on the handle before replacing the battery.